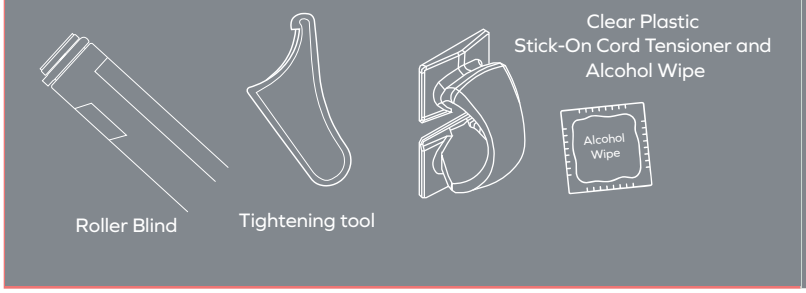
Blinds by Post

No Drill Roller Blinds (Manual) Installation & Operation Instructions

FITTING INSTRUCTIONS 1/4


You should have:

Blind parts	Tools
	

STEP 1


THE INSTALLATION OF THIS PRODUCT SHOULD BE CONDUCTED BY SOMEONE COMPETENT IN DIY.

Measure and mark the required position of the blind inside the recess. Make sure that your walls are solid and there are no obstructions in the way i.e. window handle.

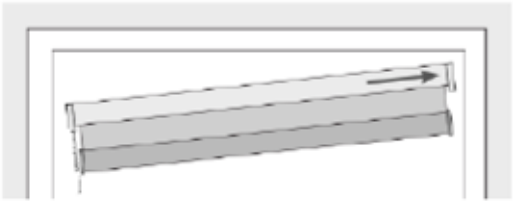

STEP 2

Raise the plunger end (the spring end) into the recess then, lift the control end of the blind until level and release pressure. Hold the blind securely in place.

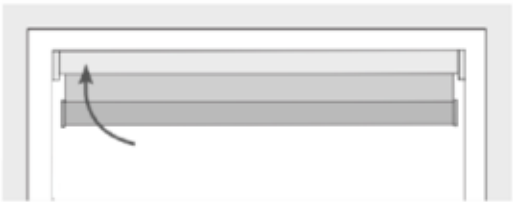

FITTING INSTRUCTIONS 2/4

STEP 3


Before locking the blind in place measure it with a spirit level to ensure it's straight. Keeping hold of the blind.





STEP 4

Hold the blind securely in place and turn the tightening wheel using the supplied tool to tighten the blind in pace.

If the tightener is on the right side of the blind turn it towards you. If it's on the left, turn it away from you.

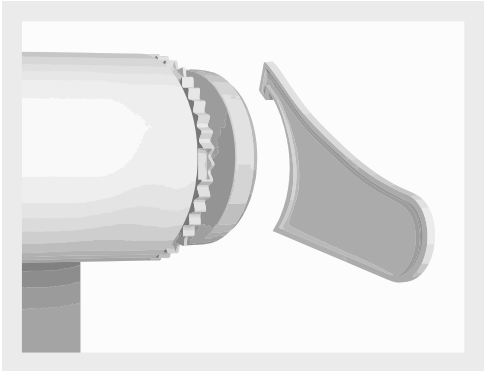


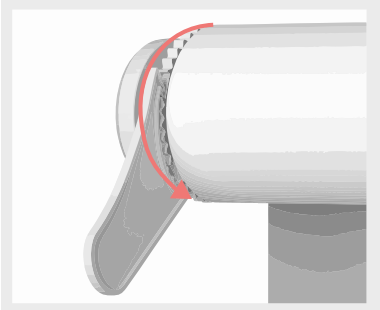

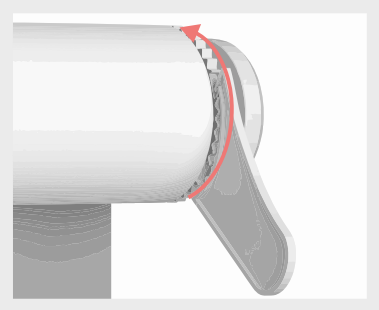

STEP 5

Children can strangle if a safety device is not installed. Always use a safety device to keep cords and chains out of reach of children.

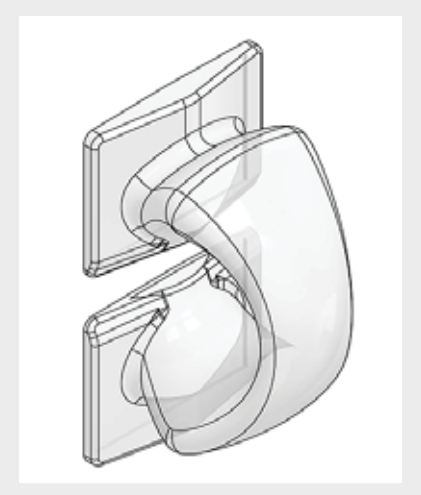

Clear Plastic Stick-On Cord Tensioner
Designed for secure attachment to walls or window frames, this stick-on cord tensioner ensures compliance with child safety regulations BS EN 13120, reducing the risk of strangulation.

Ideal for customers who prefer not to drill into their windows, this solution prevents potential warranty voids imposed by some window manufacturers.


The tensioner requires no drilling or screws; instead, it adheres firmly to the window surface using a high-performance adhesive pad. This simple yet effective design ensures compliance with safety regulations while preserving the integrity of your windows.

Each unit is made from clear plastic and includes a strong adhesive pad, along with an alcohol wipe for proper surface preparation.

FITTING INSTRUCTIONS 3/4

STEP 5

Installation Instructions:

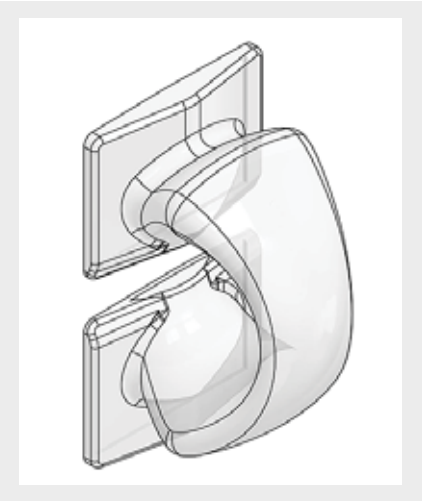

Cord Tidy Requirements:

- Affix a cord tidy to the wall at the **maximum possible distance** from the blind control mechanism.
- Ensure all operating cords are taut, with the chain no more than **50mm apart** at the entry and exit points of the cord tidy.

1. Use the provided alcohol wipe to clean the application area.
2. Allow the surface to dry completely.
3. Ensure the chain is threaded through the cord tidy and is taut.
4. Peel off the adhesive backing and press the tensioner firmly into place.

This easy-to-install solution offers safety and peace of mind without compromising your window warranty.

Child Safety – BS EN 13120 Guidelines for Corded Blinds

To comply with BS EN 13120 safety standards and minimize the risk of accidents, follow these guidelines when installing corded blinds:

If the Fixing Height is Unknown (as all our blinds have an unknown fixing height):

- For blinds with a drop of **≤ 2500mm**, the chain length must be **≤ 1000mm**.
- For blinds with a drop of **> 2500mm**, the chain length must be **the blind drop minus 1500mm.**

Following these guidelines ensures compliance with safety regulations while creating a safer environment, particularly for homes with young children.

FITTING INSTRUCTIONS 4/4

STEP 6

Troubleshooting Guide

Fabric Run-Off

Diagram 1 below shows the fabric running off from the right-hand side of the blind.

To correct the run-off, unroll the fabric, place a 25mm piece of sticky tape onto the tube (Diagram 2) at the opposite end of the blind to the run off. Fully wind the blind to the run-off. Repeat until the fabric is no longer running-off.

DIAGRAM 1


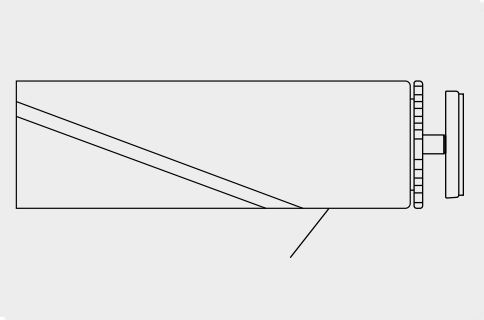


DIAGRAM 2

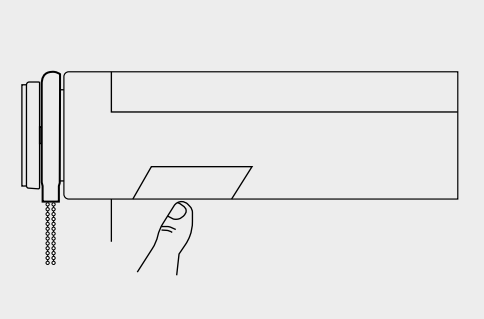

Stiff Clutch Operation

Hard operation of the clutch might be caused by the tightener putting too much pressure on the blind.

To reduce it turn the tightener to the opposite direction explained in STEP 4 ensuring that the blind stays secured and does not slip from the wall.

OPERATION INSTRUCTIONS

PLEASE READ THE INSTRUCTIONS BEFORE OPERATING THIS PRODUCT


STANDARD ROLL

(Fabric unrolls from behind blind)

1. To lower the fabric on the roller blind gently pull the operating chain closest to the window.

2. To raise the fabric on the roller blind gently pull the operating chain furthest from the window.

3. Where possible operating chain should be operated from just above the chain connector as this puts less pressure on this component, reducing the risk of snapping or pulling apart.

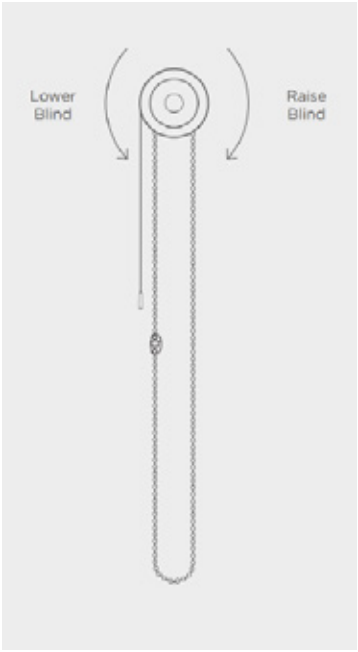


REVERSE ROLL

(Fabric unrolls from front of blind)

1. To lower the fabric on the roller blind gently pull the operating chain furthest from the window.

2. To raise the fabric on the roller blind gently pull the operating chain closest to the window.

3. Where possible operating chain should be operated from just above the chain connector as this puts less pressure on this component, reducing the risk of snapping or pulling apart.

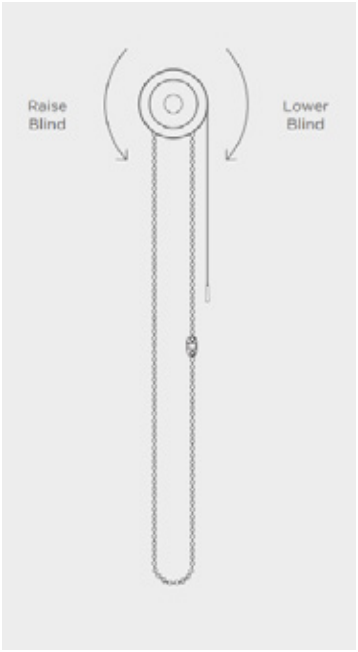

MAINTENANCE

The product is maintenance free however we recommend that regular visual checks are completed to ensure that no components have been damaged, which could result in operating difficulties and/or cause a safety risk. If any maintenance is required we recommend that the work is carried out immediately, by a reputable blind company. Ensure the child safety device is always secure and installed correctly.

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.



child safe

make it safe™

BBSA

BRITISH BLIND & SHUTTER ASSOCIATION