

# Curtains *by* Post


## How to Measure for Wave Curtains



# MEASURING INSTRUCTIONS

## What you'll need:

Tape Measure

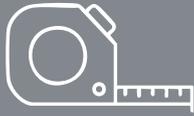

Pencil




Paper



Phone/tablet/PC




## 1. Choose your fitting style:

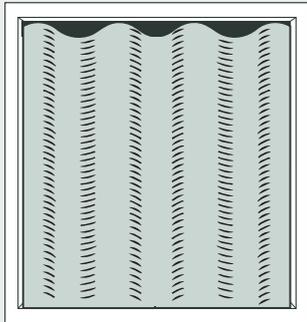

Recess Fitting

Recess fitting creates a clean, built-in look by sitting neatly inside the window recess. It's ideal if you want a tidy finish with minimal light gaps. **Please note** that the curtain will stack within the recess.

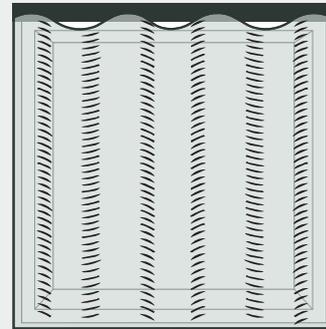

Outside Recess Fitting  
(Exact)

Outside recess fitting is perfect if your window tilts inwards, has obstructions or if you don't have a recess as the curtains fit the exact size you need. It also allows you to cover more of the window area for better light control. **Please note** that the curtain will stack outside the recess.

**Please note:** The depth of our Wave Curtain pleat will be approximately **13cm** from front to back, so make sure you allow for this. The minimum recess depth that you require in front of any obstructions in **6.5cm**, as this is half of the **13cm** total depth.

If you have a recess depth of **6.5cm**, please note the remaining **6.5cm** of the pleat will sit in front of the recess


# MEASURING INSTRUCTIONS

## STEP 1

**For recess fitting:** Measure the full width of your recess where you would like the curtain to fill the space.

**Please note:** For recess fitting, measure in 3 places ensuring to send in the smallest measurement. Do not make any deductions as we will deduct **10mm** from the width for the curtain and track to fit within the space.

**For outside recess fitting (exact):** Measure the width of your recess or where you would like the curtain to fill the space, then add a minimum of **15cm** to each side depending on obstructions such as light switches.

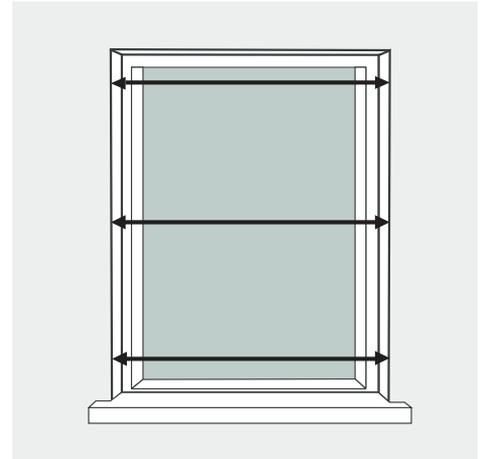

## STEP 2

**For recess fitting:** Measure the full drop of your recess where you would like the curtain to fill the space.

**Please note:** For recess fitting measure in 3 places ensuring to send in the smallest measurement. Do not make any deductions as we will deduct **15mm** from the drop for the curtain and track to fit within the space.

**For outside recess fitting (exact):** Measure the drop of your recess then add a minimum of **15cm** to each side depending on obstructions. For the bottom, please check for any obstructions such as radiators, which may prevent overlapping.



## STEP 3

You can choose either a single curtain or a full pair, depending on your space. Measuring is the same for both options.

**A pair of curtains** is a traditional choice and works beautifully for wider windows. When selecting a pair, the total fabric width is evenly divided to create two balanced panels, making this option ideal when there are no obstructions or limitations on either side of the window.

**A single curtain** uses the same fabric allowance based on your track width, but is made as one continuous panel. This option is ideal for narrower openings, such as doorways, where a pair of curtains could feel bulky when drawn open, or where there is an obstruction on one side, such as furniture.



# MEASURING INSTRUCTIONS

## STEP 4

Enter the smallest width and drop measurements into our website.

For recess fitting ensure to check 'Recess' and for outside recess fitting (exact) ensure to check 'Exact'.

Fitting Option ?  
✓ Recess  
Exact

Fitting Option ?  
Recess  
✓ Exact

## HOW ABOUT MATCHING?

Shop our range of Roman Blinds and Cushions to pair with your Curtains!



CLICK ME



**ROMAN BLINDS**



**CUSHIONS**

CLICK ME



## You're all done!

To order your new Wave Curtains, enter your measurements into our website and add them to your basket.

Still need advice? Call our friendly customer service team on **01274 214466** or visit our website **www.curtainsbypost.co.uk** & use our live chat.

**Curtains***by*Post   **Blinds***by*Post   **Shutters***by*Post